§ 3276.12

(k) Any other information that we may require.

§ 3276.12 What information must I give BLM in the monthly report for facility operations?

- (a) For all electrical generation facilities, include in your monthly report of facility operations:
- (1) Mass of steam and/or hot water used or brought into the facility, in klbs. For facilities using both steam and hot water, you must report the mass of each;
- (2) The temperature of the steam or hot water in deg.F;
- (3) The pressure of the steam or hot water in psi. You must also specify whether this is psig or psia;
- (4) Gross generation in kiloWatt hours (kWh);
- (5) Net generation at the tailgate of the facility in kWh;
- (6) Temperature in deg.F and volume of the steam or hot water exiting the facility:
- (7) The number of hours the plant was on line:
- (8) A brief description of any outages; and
- (9) Any other information we may require.
- (b) For electrical generation facilities where Federal royalty is based on the sale of electricity to a utility, you must include the following additional information in your monthly report of facility operations:
- (1) Amount of electricity delivered to the sales point in kWh, if the sales point is different from the tailgate of the facility;
- (2) Amount of electricity lost to transmission;
- (3) A report from the utility purchasing the electricity which documents the total number of kWhs delivered to the sales point during the month, or monthly reporting period if it is not a calendar month, and the number of kWhs delivered during diurnal and seasonal pricing periods; and
- (4) Any other information we may require.

§ 3276.13 What extra information must I give BLM in the monthly report for flash and dry steam facilities?

In addition to the regular monthly report information, send us:

- (a) Steam flow into the turbine in klbs; for dual flash facilities, you must separate the steam flow into high pressure steam and low pressure steam;
 - (b) Condenser pressure in psia;
 - (c) Condenser temperature in deg.F;
- (d) Auxiliary steam flow used for gas ejectors, steam seals, pumps, etc., in klbs;
- (e) Flow of condensate out of the plant (after the cooling towers) in klbs; and
- (f) Any other information we may require.

§ 3276.14 What information must I give BLM in the monthly report for direct use facilities?

- (a) A daily breakdown of flow, average temperature in, and average temperature out, in deg.F;
- (b) Total monthly flow through the facility in thousands of gallons (kgal) or klbs:
- (c) Monthly average temperature in, in deg.F;
- (d) Monthly average temperature out, in deg.F;
- (e) Total heat used in millions of BTU's (MMBTU);
- (f) Number of hours that geothermal heat was used: and
- (g) Any other information we may require.

§ 3276.15 Must I notify BLM of accidents occurring at my utilization facility?

Yes, you must verbally inform us of all accidents that affect operations or create environmental hazards within 24 hours after the accident. When you contact us, we may require you to submit a report fully describing the incident.

Subpart 3277—Inspections, Enforcement, and Noncompliance

§ 3277.10 Will BLM inspect my operations?

(a) Yes, we may inspect all operations to ensure compliance with the requirements of 43 CFR 3200.4. You must give us access to inspect all facilities utilizing Federal geothermal resources during normal operating hours.